
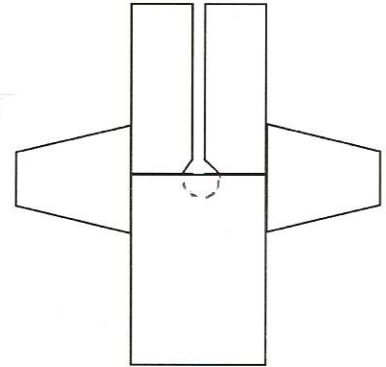


8. Lay out the two back units (B) on top of the gown front (A) right sides together, line up the bottom edge, and sew the shoulder seams.


Finish neckline with bias tape, fold over elastic, serge, etc.

Can make bias tape strip from leftover sleeve triangle

9. Open this up, matching the center of the top of the fold of the sleeve unit to the shoulder seam you just sewed, right sides together, sew the arm in place. Repeat with the other side.

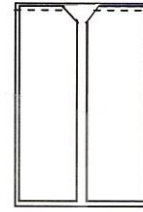

10. Fold the gown over at the shoulders, right sides together and sew the seam from the bottom, to the armpit (match those seams), out to the wrist. Repeat on the other side.
11. Cut a 7" piece of 1/2" elastic, pinning the ends and the center, stitch the elastic into place, overlapping the seam by 1/4".
12. Sew four ties (16" each) on the back. Two on the top and two 18" down from the top ties.
13. Hem or the fabric will curl when washed.

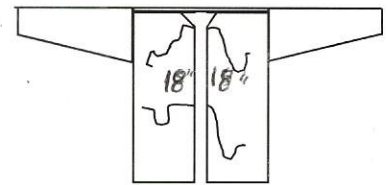

Note: This was our version of "one size fits all" but we felt the sleeves should be tight. You can adjust that measurement when you cut over from the fold, but you will also have to adjust the elastic. The magic math is elastic is 2/3 the size of the opening.